



**Installation Manual**

**For**

**Shower Valve Trim Set**

Contact us at 888-392-9625 or email us at [sales@serenityenclosures.com](mailto:sales@serenityenclosures.com) with any questions during the installation process. Our service team is available 24/7.

1. Unbox shower valve and drain tube (PIC 1)




2. Connect drain to shower valve (PIC 2-a). Completed connection shown in PIC 2-b.



3. Install shower valve through the back of the wall panel. Place in the big hole in the center of the wall panel. (PIC 3-a) Completed step shown in PIC 3-b.




4. Put shower head line in the small hole at the top of the wall panel (PIC 4-a) and screw the white bracket down to the top edge of the wall panel (PIC 4-b).

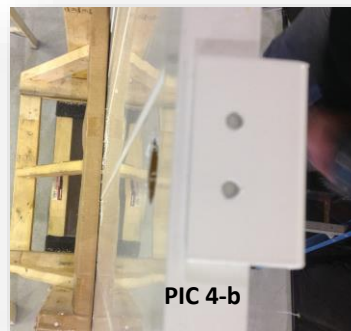

5. Install the handle (PIC 5).





- a. Place the trim ring over the valve (PIC 5-a).  
b. Place black ring on the valve (PIC 5-b). **The raised part will face out.**

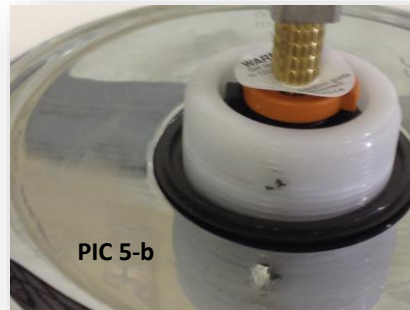

- c. Screw the handle on the white sleeve (PIC 5-c). **Make sure the square hole inside the handle lines up with the square on the valve.**



6. Fasten the PEX tube to the back of the wall panel with brackets (PIC 6-a). One should be placed half way up the PEX towards the shower head; the other should be placed down by the drain valve (PIC 6-b).

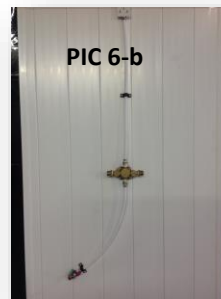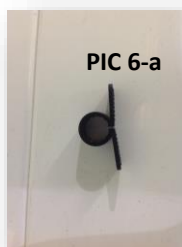

7. Connect braided stainless steel connectors to both sides of shower valve. Connect to hot and cold water lines.